CC 379 / LOMON SUND 1500

User Manual

Following-up Spotlight 1200W

Pis read this user manual carefully before using the product

ATTENTION

OPERATION REQUEST

- 1. Pis make sure to keep the distance of 0.5m away from the equipment or decorating products which are easy to bring the explosion when you are installing the outdoor lighting equipment. Pls make sure there will have nothing to block the ventilating fan and the exhausting channel when you are starting to choose the place to install the equipment.
- Keep away from the rain and wateriness. You should cut off the power supply first before openning the outer cover.
- This product is the one of the indispensable and effective lighting equipment for the stage performance, it can be displayed according to the stage requirements.

4. The requirement of replacing the lamp : firstly, cut off the power supply, rotate out the screw which is at the top of the tail, pulling out the frontal.

ventilation cover towords the back direction, finding the lamp and rotating out the screw at the two ends of the light bulb, and then removing the light bulb carefully(don't touch the part of the glass on the light bulb with some oil material or your wet hands), use the light bulb of the same model and power consumption(we suggest that you should buy this kind of lighting equipment from the manufacturer or the dealer), then you can fixing the new light bulb on the contrary direction. The focus of the exact and optical tens should be adjusted before leaving the factory, if the you want to adjust it due to the other local factors , you can release the screw after lighting the bulb and remove

before and after the direction, then put the lens to the suitable place.

THE INSTRUCTION OF USING

you start to use it. If the place where on working with the voltage of the might fluctuations, then we advise you to make use of AC230V steady power supply or regulator to supply the electricity, to assure that the power consumption of the power supply can satisfy the request of the lighting equipment. This fixture

Pls check if the voltage of the power supply were on working as usual pefore

2. The person is not allowed to touch the outer of the equipment where it is not heating when the outdoor lighting fixture is on working. Keep the person away

belong to the protection of the first grade, so it must connect the ground well to assure the user's safety, it should be managed by the professional personnel.

from the safety distance.

- 3. Following up spotlight with intelligence is adopted the bulb of gas discharging which on the power consumption of 1200W or 2500W. After cutting off the electricity, if you want to restart the fixture, it should wait for 15 minutes, at the same time, the light bulb has coolled natural already.
- 4. The inside components of the Following up spotlight with intelligence, just like the trigger. Iight bulb and so on, you'd better purchase these products from the manufacturer.
- 5, The ground wire of this fixture should be connected well! This lighting fixture has the function of delayed start-up protection. When you have opened the light, it would start to reset in five minutes delay.

OPERATION

- 1. Pls connect the wire of the power supply and the ground well after the installation is finished. (Make sure that the connecting wire is 2.5GB), and then open up the switch.
- 2, Then you can see the "WHITE" indicator is on lighting after 2 minutes, it show that the resetting is finished. Pressing the indicator of "ON/OFF" directly until it is on lighting. At that moment, there appear a little circle on the following up spotlight (the brightness of the light has not reached the best effect, it should wait for three minutes more or less), press the button of the "BIG LIGHT CIRCLE", then the circle of the light will become more and more larger If you want to reduce the circle of the light, press the button of "SMALL LIGHT CIRCLE" directly. The indicator of the "STROBE" means the flashing frequency, the light will be flashed when you press the button once, and when you press the button again, the flashed light will be cancelled.
- 3, Replacing the color.(Press the button of the "RED", the light will become red color. Press the button of the "YELLOW", the color of the light will be changed into yellow and press the "BLUE" button, it will also be changed into blue. And press the button of "GREEN", the color of the light will become green.)
- 4:The indicator of the "RESET" means reposition.

THE TECHNICAL DATA

1, The Electrical Parameters:

Power supply input (Voltage): AC220V 50-60Hz Lamp source: HMI1200W / HMI1500W / HMI2500W

(The bulb with gas discharging)

Fuse: 15A 20A

2. Optical data:

Adopt the Non-spherical surface focused light: ¢68

The object lens is adopted the optical lens: ¢68

700° Focus lens is adopted the focused light of twin-lens: one is \$110 and 300°.

another one is ¢95 and 200°

Function:

Color can be adjustable: red, yellow, blue, green, white

The speed of the flashing frequency: 1-7seconds

Cooling system: two DC 12V. Fan cooling

Control: with the ConsoleAppender

4, Packaging: Paper-Box packaging

Outer size: 122x45x30cm Net weight: 33kg

Gross weight: About 36kg

5. The other component:

One Triangle bracket and a copy of instruction.

(1) If the lamp can't be on lighting when you are using the lighting equipment.

pls check the power supply and check if the fuse have melted already before

cutting the electrical source off. If it were all up to shuff, then inspect the light bulb,Pls change it into a new bulb if it was damaged.(Hearing ann

inspecting the trigger, checking if it were also on working as usual)

(2) PIs check the BNC connector plugs, make sure that it is connected well.

when the electrical machine is not rotating as usual, then change it into A new one.

WARRANTY

You can gain this kind of protection after but invoice and Warranty cards well. We provide from the day you have bought our products, we also offer you the repairing service, and costs.	e the free repairi ng service for you After the free repairing time is over
Product Model:	
Supplier:	
The date of the invoice:	
The Invoice No.	
Repairing Record:	
	Date:
Repairing Record:	
	Date:
Repairing Record:	
	Date: