

User Manual

Fog&Bubble Machine



Please read this manual carefully before operation

adjust the green brightness from 1-255, and then press OK to save.

6) Press the menu key to display B, then press up or down to adjust the blue brightness from 1-255, and then press OK to save.

2. Remote control (A&B 2 keys)

Press the A key, spray the fog, LED work automatically.

Press the B key, spray the bubble.

Press B to spray bubble first before press A to spray smoke, otherwise, smoke will be spray out from other fan windows.

3. DMX control

CH	Value	Function
1	0-255	Spray the fog
2	0-255	Spray the bubble
3	0-255	Red color brightness
4	0-255	Green color brightness
5	0-255	Blue color brightness
6	0-255	LED strobe
7	0-9	No function
	10-99	Color gradual change
	100-199	Color jump change
	200-255	Color pulse change
8	0-255	CH7 LED multi-function speed

Operation Instruction

1. Digital display Operation



MENU

UP
Smoke

DOWN
Bubble

ENTER
confirm

Menu	Value	Function
A	1-512	DMX address setting
P	1-100	Spray the fog, adjust amount by UP/DOWN
R	0-255	Red color brightness
G	0-255	Green color brightness
B	0-255	Blue color brightness
---		Standby
-UP-		Warm up

- 1) Press up (on/off) to work/stop.
- 2) Adjust the amount of smoke: press the menu button to display P, then press up or down, adjust the range from 1 to 100, and then press OK to save.
- 3) DMX: press menu to display A, then press up or down to adjust the range from 1-512, and then press OK to save.
- 4) Press the menu key to display R, then press up or down to adjust the red brightness from 1-255, and then press OK to save.
- 5) Press the menu key to display G, then press up or down to