
QWiK CT-12 Instructions

- 1. Press ON.
- 2. Hold the insturment so the sound source is within 4-8 inches (100-200mm) of the "MIC" hole on the front of tuner.
- **3.** Play any note. The note being tuned will show at the top of the LCD meter.
- 4. While tuning, if the needle stops to the left of "0" the pitch of the note is flat (b). Adjust instrument. Play note again. Repeat until the meter needle lines up directly over the "0" on the meter. The note is then in tune.
- If the needle stops to the right of the "0" the pitch of the note is sharp (#). Adjust instrument. Play note again. Repeat until the meter needle lines up directly over the "0" on the meter.
- 6. The 3 LED's will light as follows:
 - **RED** \triangleleft The note is -1 to -50 cents below correct pitch.
 - **GREEN** The note is in tune.

• **RED** \blacktriangleright The note is +1 to +50 cents above correct pitch.

If the \triangleleft LED lights, follow instructions in no. 4 above.

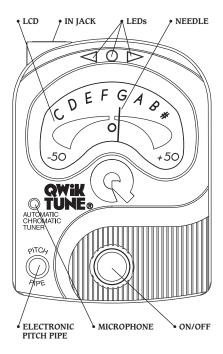

If the \blacktriangleright LED lights, follow instructions in no. 5 above.

- 7. If the note is greater than -50 or +50 cents from true pitch, adjust instrument until one of the LED's lights up.
- 8. The QWIK TUNE[®] is more sensitive and the meter is faster acting than some other chromatic tuners. On some instruments the needle on the LCD meter may move rapidly from one reading to another. If this happens, try playing the note more lightly. Also, when tuning an instrument, make sure there is no background noise in the room (voices, other musical instruments, radio, etc.)
- **9.** When LCD becomes faint, replace batteries with 2 AAA batteries.
- **10.** After 2 minutes of non use, QWIK TUNE_® will automatically shut off to save battery power.
- 11. The **ELECTRONIC PITCH PIPE** is activated by the small button to the left of the **ON/OFF** button. Press once and you will hear the C tone. Press again for C#, D, D#, E, F, F#, G, G#, A, A# and B tones. Press again to turn off. These tones can be used as a tuning reference to tune severely out of tune instruments.

Enjoy your music!



Get the Scoop on the Latest in Tuners & Metronomes! www.qwiktunetuners.com

> What's New in Guitars, Effects & Accessories! www.danelectro.com

EEC Agent: John Hornby Skewes & Co., Ltd. Salem House, Parkinson Approach, Garforth, Leeds LS25 2HR UK

QWIK TUNE LIMITED U.S.A. WARRANTY

This product is warranted to the original purchaser to be free from defects in material and workmanship for a period of 12 months from the date of purchase, provided you provide proof of purchase at the time of requesting warranty service. In the event of defect we will, at our option, repair or replace the defective product with a new or reconditioned product, provided the defective product is returned beforehand postage and insurance prepaid to Evets Corporation at the address below. This warranty does not cover batteries, casings, or damage caused by accident or misuse. Warranty valid in the USA. This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Please retain a copy of this warranty and your sales receipt.

> EVETS CORPORATION P.O. Box 1327, Camarillo, CA 93011 Telephone: (805) 389-4605 Fax: (805) 383-2050

This product complies with FCC Part 15 rules. Operation of this product is permitted in USA provided this product does not cause harmful interference and provided this product accepts interference from other devices, even if that interference is detrimantal to performance of this product.