According to Figure 1 on page 3 of the user manual, DIP 5 is ON and so the **VS-1616A** will respond to command 01, **and not command 02**. To work with command 02 the unit should not be in "Follow-SYSTEM mode", that is, DIP 5 should be OFF.



P/N: 2900 - 0020521 A1